



ETR060380

Wall Mount Module Upright Outlet


ISO9001




ENCL.ACC.
E510113




Box Contents

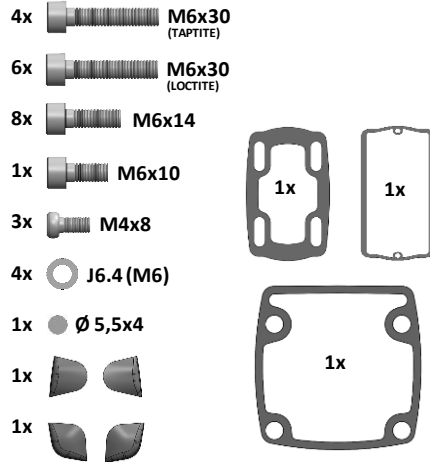


- 1) Remove the yellow tape. Place the gasket with the adhesive surface inside.

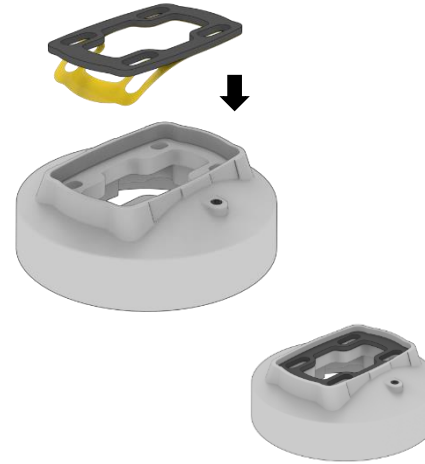


- 2) Insert the profile in the direction of the arrow.

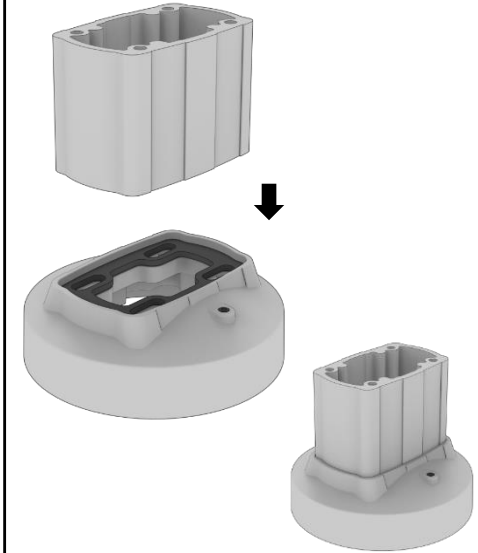


- 3) Assemble the M6x30 profile bolts.

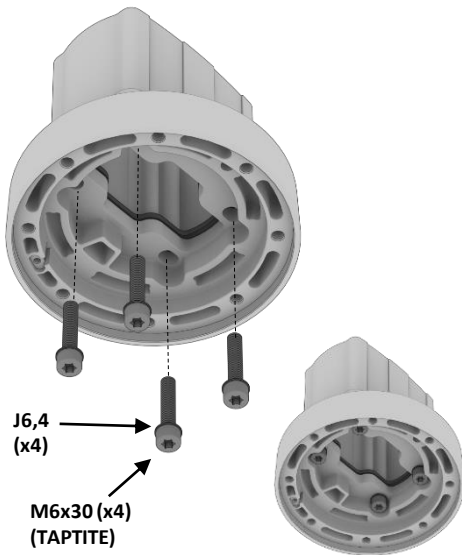


- 4) Insert the stop pin into its socket.

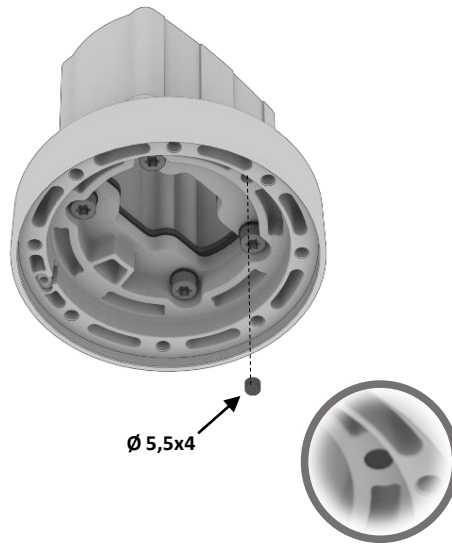


- 5) Insert the module into the part and fix the bolts.

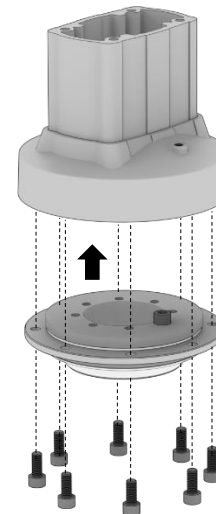


- 6) Check that the assembly is done as shown in picture.

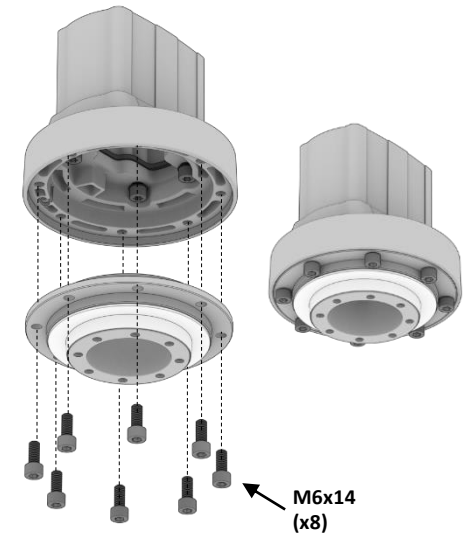


- 7) Assemble the upper group with the under module.

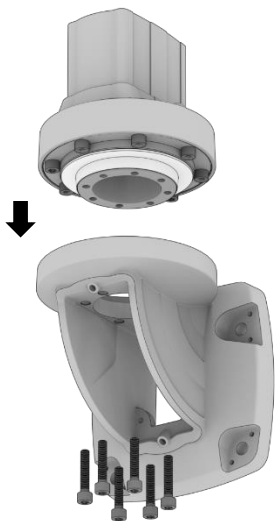

- 8) Fix the connecting bolts.

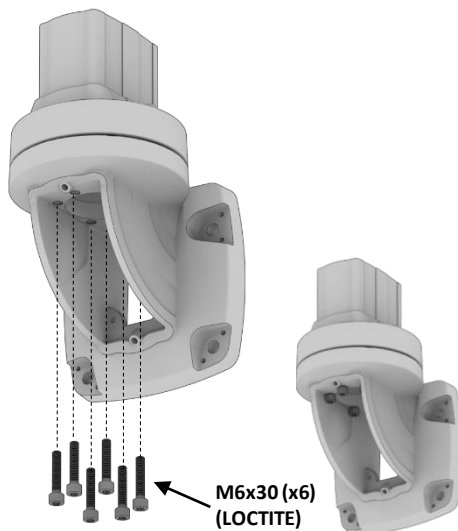

- 9)

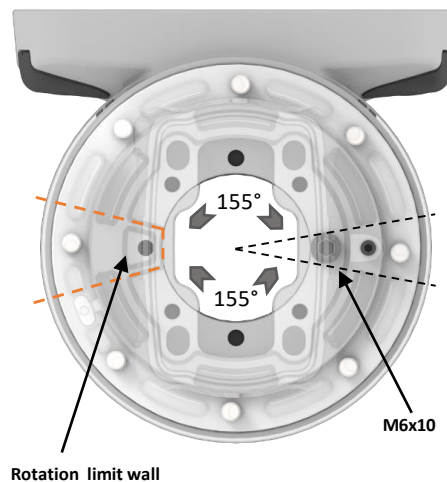

- 10) Attention:


You can limit the right-left rotations of the module with M6x10 bolts. There are eight holes at equal intervals on the module. You can optionally set the rotation limits with two bolts.




- 11) Remove the yellow tape. Place the gasket with the adhesive surface inside.



- 12) Remove the yellow tape. Place the gasket with the adhesive surface inside.

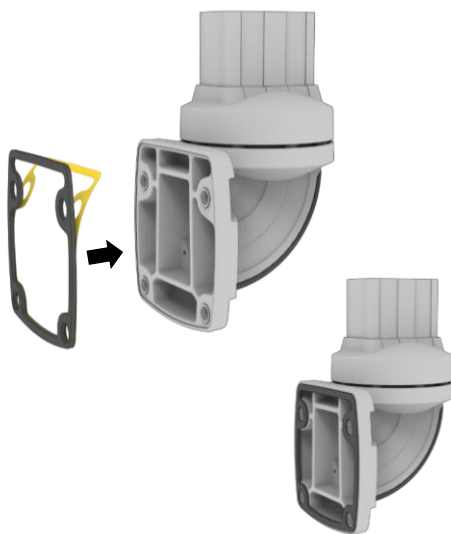

- 13) M8 Ground anchor bolts are not included in the box.

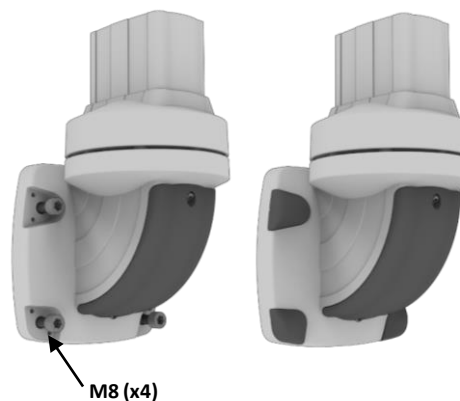

Do not forget to assemble the plastic covers of the module.

- 14) Bolt connections and cable hole dimensions required for assembly.

